



+ Notice à conserver pour l'utilisateur



Page 1



Page 2



1 – BRANCHEMENT & TEST


1 Fixer le récepteur à environ 20cm du boîtier relais



2 Dévisser le capot du récepteur



3 Découper au cutter 1 rondelle passe-câble

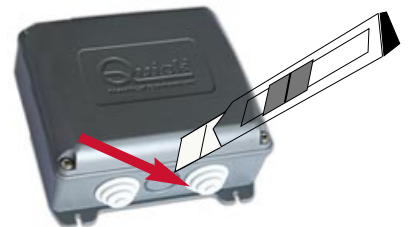

4 Brancher les fils du câble de liaison aux cosses correspondantes du récepteur



5 Connecter le câble de liaison au rep. A du boîtier relais



> Notice boîtier relais
ref. 29160050151

6 Tester l'émetteur




> Appairage de l'émetteur :


Si l'appairage entre l'émetteur et le récepteur n'est pas fait, merci de se référer à la notice fabricant du récepteur au chapitre « FONCTIONNEMENT / CONFIGURATION DU RECEPTEUR / Fonction de programmation »

COMMANDE FILAIRE


1 Fixer la prise de la commande filaire à une cloison.

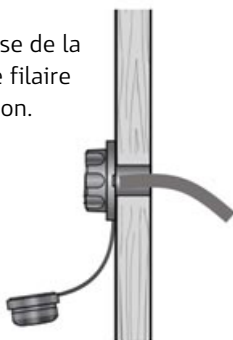

2 Connecter les 3 fils du câble de la commande filaire à la prise triangulaire du boîtier relais (rep B)

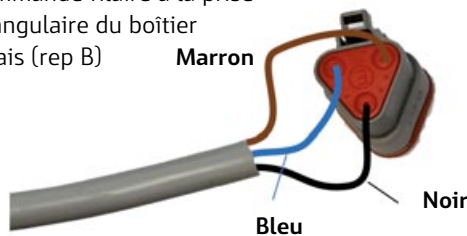

4 Brancher la commande filaire sur sa prise

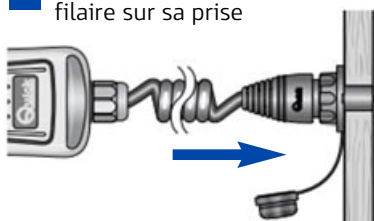

5 Actionner la commande filaire en veillant à la sécurité sur plage avant.



3 Installer le support de la commande filaire.




Enrouler ou dérouler

Pour plus d'information :

Se référer à la notice du fabricant, fournie avec la commande filaire

Ref. 29160050195


 1 – PLUGGING

RADIO CONTROL

1 Fix the radio receiver at 20cm distance of the relay box

2 Unscrew the receiver top cover

3 Cut the wire hole cap

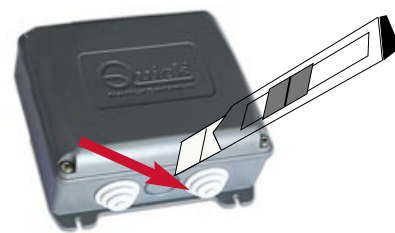

4 Plug the wire linking threads to the corresponding connector of the receiver device

5 Connect the linking wire to the rep A socket of the relay box

6 Test the pocket transmitter



> Relay box manual
ref. 29160050151

Rep. B
(> wired control)

> Pairing the transmitter to the receiver :
If the pairing process has failed, please refer to the supplied manufacturer's manual, chapter named «FUNCTIONING / RECEIVER CONFIGURATION / Program function»

WIRED CONTROL


1 Fix the socket of the wired remote control to the partition

2 Connect the 3 threads of the wire of the remote control to the triangular plug of the relay box (rep B)
Brown...
Blue
Black

3 Screw the control holder

4 Plug the remote control wire into the socket

5 Press button while watching that the operation on fore-deck is safe

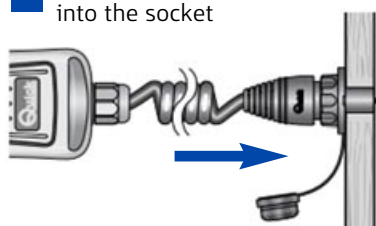

For further information :
Please refer to the supplied manual of the remote control manufacturer

 + Instructions to be kept by the user



www.facnor.com



Ref. 29160050195